

Aero Comfort Camp Bag Limited Warranty


The manufacturer warrants to the original purchaser only when the Aero® Comfort Camp Bag is used properly, that the mattress will be fully guaranteed against defects in material and workmanship for a period of 180 days from the date of receipt of item, provided further that the Aero Comfort Camp Bag has been operated according to the provided instructions (Included in your purchase is a repair/patch kit with these instructions).

The pump will be guaranteed to the original purchaser against defects in materials and workmanship for a period of 180 days from the date of receipt provided the motor has been operated according to the instructions. Our obligation under this warranty shall be limited to the repair or exchange of any part or parts that may prove defective under the conditions and during the periods described above. This limited warranty shall not apply if our inspection shows:

- A. Any product or part that has been damaged by alterations.
- B. Any product or part that has been subject to accident, misuse, abuse or has been operated contrary to the manufacturer’s instructions for the product. The purchaser must obtain an authorization from the manufacturer before returning a defective product. The product should be carefully packaged and delivered postage or delivery charges prepaid. The customer shall be responsible for all damages incurred in shipping.

THIS WARRANTY IS EXPRESSLY IN LIEU OF ALL OTHER WARRANTIES EXPRESSED OR IMPLIED INCLUDING THE WARRANTIES OR MERCHANTABILITY AND FITNESS FOR USE AND OR ALL OTHER OBLIGATIONS OR LIABILITIES ON THE PART OF THE MANUFACTURER. UNDER NO CIRCUMSTANCES SHALL THE MANUFACTURER BE HELD LIABLE FOR INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES.

The manufacturer neither assumes nor authorizes any representative or other person to assume any obligation or liability other than those expressly set forth herein. There are no warranties, which extend beyond the above description. This warranty gives you specific legal rights and you may also have other rights which may vary from state to state.

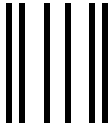

PLACE
STAMP
HERE

WARRANTY DEPARTMENT
AERO PRODUCTS INTERNATIONAL, INC.
1225 KARL COURT
WAUCONDA IL 60084-1098



**Aero® Comfort Camp Bag
Instruction Manual**

 



Instructions for using your Aero® Comfort Camp Bag

Congratulations, you are about to enjoy the comfort of the Aero Comfort Camp Bag, the finest portable sleeping system available anywhere and made possible by the company that brought you the original AeroBed®. Retain this instruction manual for future reference.

IMPORTANT: Preparation of your Comfort Camp Bag requires no tools. Use of tools may damage your mattress or sleeping bag.

IMPORTANT SAFETY INFORMATION AND WARNINGS

-  **WARNING:** Adult supervision is required. Follow all safety instruction to avoid injury.
-  **WARNING:** This product has an electrical component that is not a toy. To avoid risk of fire, burns, injury and shock, it should be not played with or placed where small children can reach it.
- Remove all sharp objects from area where the Comfort Camp Bag will be set up and used.
- Do not use this product on abrasive surfaces or near pointed/sharp items or surfaces. Protruding objects may puncture mattress.
- The mattress is made of PVC and therefore may melt or burn if it comes in contact with any flame or heat source. Do not place it near or against heaters, open flame or other hot objects.

Your package should come complete with all the following items:

1. Insulated Nylon Sleeping Bag
2. Inflatable PVC Mattress
3. Rechargeable Inflator Air Pump
4. Pump Charger Plug
5. Vinyl Repair Kit
6. Nylon Stuff Sack


IMPORTANT: PLEASE TAKE A FEW MINUTES TO READ ALL THESE SIMPLE INSTRUCTIONS.

1. Store your Aero Comfort Camp Bag in a dry, well-ventilated area away from the elements.
2. Your Aero Comfort Camp Bag contains 3 pounds of polyester material and is temperature rated to 34° F.
3. Allow the unit to dry completely before storing for an extended period of time.


IMPORTANT: TO CHARGE THE INFLATOR PUMP

The new inflator pump must be charges for 24 hours BEFORE you inflate your Aero mattress for the first time.


1. Remove the inflator pump and the recharger from the box.
2. Remove the tiny rubber plug from the hole on the back of the pump and insert the recharger's mini-plug into the hole.

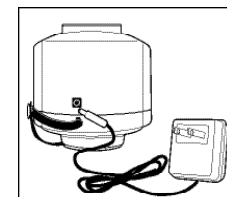


3. Plug the recharger into any standard 110-Volt electrical outlet and let it charge for 24 hours.

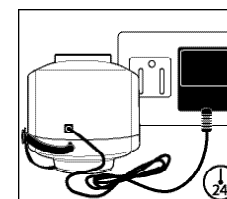

4. After the pump has been charged for 24 hours, remove the recharger unit from the electrical outlet and the mini-plug from the inflator. The pump won't function while the mini plug is in place.

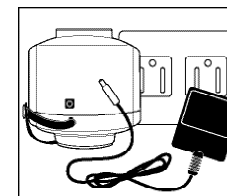


5. Re-insert the rubber plug into the hole on the back of the pump.

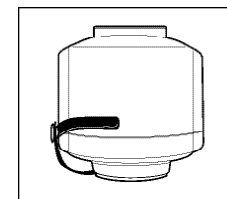


TO INFLATE THE MATTRESS


1. Place the silver Aero® mattress on the floor or other surface free of obstructions or sharp objects.

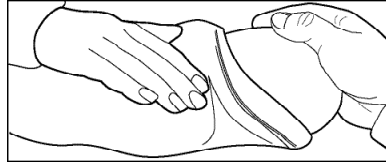

2. Position the mattress with the valve exposed, allowing the mattress to unfold into the space you've chosen. Make sure the valve cover is securely closed by pressing the valve cover into the opening. You will hear a snap when the tab is securely in place.

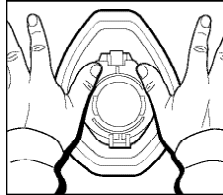

3. Twist off the outer valve cover in a counterclockwise direction. Remove the protective dust cap from the pump. Place the mouth of the pump over the valve and gently rotate the pump clockwise until it activates.

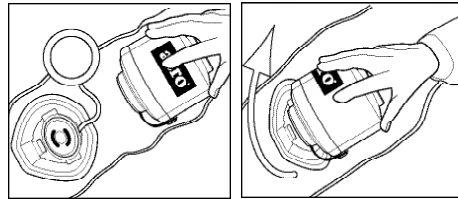


4. After approximately 80 seconds, a high-pitched tone from the pump with signal the Aero mattress is inflated to full (firmest) capacity. Rotate the pump counterclockwise to deactivate and remove the valve. There is no risk of over inflating.

Note: Do not use any means other than the Aero® pump to inflate your mattress.


5. Remove and roll out the sleeping bag with the neck cut away side facing up. Fully unzip the lower mattress compartment of the sleeping bag.

6. Gently push and place the mattress into the mattress compartment with the valve positioned as shown. Close the hook & loop flap to cover the valve then zip to close the compartment.


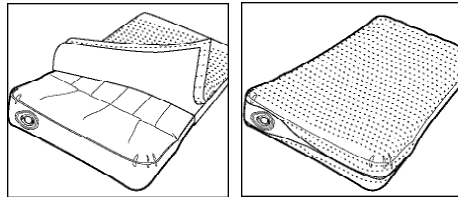


TO DEFLATE AND STORE



1. Open the hook & loop flap then open the air release valve cover at the head of the mattress to release the air. With thumb and forefinger, squeeze the tab toward the center of the valve cover until it opens. The mattress will fully deflate in approximately 15 seconds.

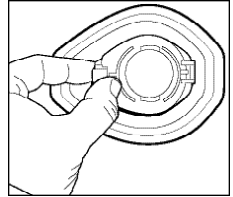


2. Fold the sleeping bag in half, and then roll it from foot to head until all the air is expelled.

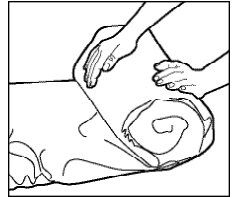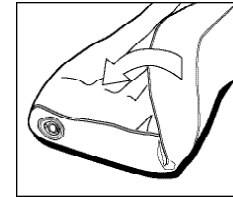

3. When the sleeping bag is completely rolled, close the air release valve to ensure proper seal for next inflation. Use 2 thumbs to push cover firmly into the valve. Be careful not to push valve cover to the right or left as it snaps into the valve opening. You will hear the tab snap into place.

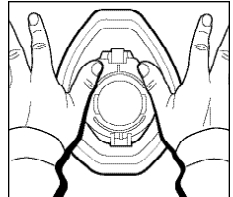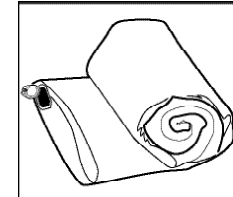


4. Slide the Aero Comfort Camp Bag into the stuff sack and store it until next use.

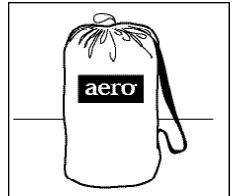

TO RECHARGE THE PUMP/INFLATOR

1. Before recharging, make sure the pump is fully discharged. Plug the unit into a 11-Volt electrical outlet for 10 to 12 hours. A full charge will hold approximately 28 days or up to 5 inflations of the air mattress. In an emergency, a 2-hour charge will provide one inflation.

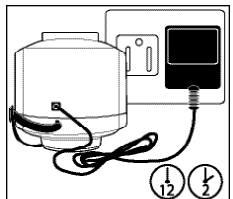

CARING FOR THE SLEEPING BAG

1. Do not store sleeping bag while damp. Take care to completely dry sleeping bag prior to storage for any length of time.
2. Store sleeping bag rolled up loosely, so air can circulate around the bag and insulation is not over compressed.

RECOMMENDED WASHING INSTRUCTIONS






1. Remove the PVC mattress from zippered mattress compartment.
2. Use front-loading commercial rotating drum washing machine.
3. Wash in cold water with 1/4 cup of laundry detergent. DO NOT use bleach, chlorine bleach or detergent containing bleach.
4. Tumble dry on low temperature in large commercial clothes dryer or line dry in an open position. DO NOT wring dry or twist sleeping bag during the washing or drying process.
5. If machine washing is not possible, hand wash with 1/4 cup of laundry detergent in a large tub of cold water. Line dry in an open position.
6. DO NOT DRY CLEAN THIS SLEEPING BAG.

Your Comfort Camp Bag by Aero conforms to the CPAI 75 – Rate of Burn Standard published in 1975.

TROUBLE SHOOTING

Very rarely, the Aero mattress may fail to inflate properly. Should this occur, please check the following checklist.

- A. Did you fully charge the pump?
- B. Did you unplug the charger from the pump and reinsert the rubber plug?
- C. If the mattress doesn't appear to be inflating properly: make sure the valve is properly closed.
- D. If air leaks from the valve: Carefully remove the round rubber gasket inside the air release valve cover (diaphragm). Rinse this gasket with warm tap water then reinsert into the valve cover making certain that the side of the gasket with the U-shaped groove face into the cover. Wait 15 minutes and proceed with inflation instructions.
- E. Small holes or rips can be repaired with the repair/patch kit included.
- F. If trouble persists, please call our customer service number, 1-888-462-4468, Monday – Friday, 9:00 AM to 5:00 PM Central Standard Time. A customer service representative will answer your questions and help you correct any problem with your Aero Comfort Camp Bag.

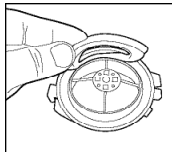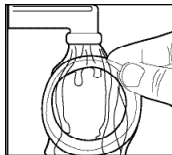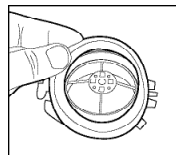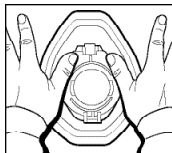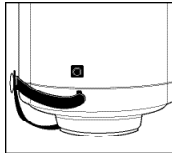

Please take the time to fill out all warranty information. This information is for internal use only. No information provided will be sold or distributed to soliciting organizations. This information is strictly used to help us better serve our customers.

WARRANTY REGISTRATION

- 1) Cut along dotted line. 2) Fill out. 3) Return within 10 days of purchase.

1. ☐ Mr. ☐ Mrs. ☐ Ms. First name: _____ Initial: _____ Last name: _____
2. Address: _____ Apt. #: _____
3. Town/City: _____ State: _____ Zip: _____ Phone: (____) _____
4. Email address: _____
5. Date of Purchase: _____ Product name: _____ Model #: _____
6. Place of Purchase: ☐ TV/Infomercial ☐ Catalog ☐ Web Site ☐ Retail Store (specify) _____ ☐ Other _____
7. Check the three most important influences on your purchase of this aero® product:
 - a. ☐ product feature(s)
 - b. ☐ purpose and style
 - c. ☐ convenience and use
 - d. ☐ quality and durability
 - e. ☐ warranty and service
 - f. ☐ product packaging
 - g. ☐ advertising
 - h. ☐ in-store video/display
 - i. ☐ value for price
 - j. ☐ prior experience with an aero product
 - k. ☐ received as a gift
 - l. ☐ recommendation of family/friend
 - m. ☐ special offer
 - n. ☐ in-store promotion
 - o. ☐ comfort
 - p. ☐ health reasons
8. Check who will use this product :
 - a. ☐ yourself
 - b. ☐ children
 - c. ☐ family
 - d. ☐ friends
 - e. ☐ guests
9. What is your age and those of the other members of your household?
 - a. age _____ ☐ male ☐ female
 - b. age _____ ☐ male ☐ female
 - c. age _____ ☐ male ☐ female
 - d. age _____ ☐ male ☐ female
 - e. age _____ ☐ male ☐ female
10. Check your present income level:
 - a. ☐ under \$15,000
 - b. ☐ \$15,001 - \$25,000
 - c. ☐ \$25,001 - \$50,000
 - d. ☐ \$50,001 - \$75,000
 - e. ☐ \$75,001 - \$100,000
 - f. ☐ over \$100,000
11. Check how this product will be used:
 - a. ☐ gift
 - b. ☐ camping
 - c. ☐ travel
 - d. ☐ school
 - e. ☐ home for guests
 - f. ☐ home for family
 - g. ☐ vacation homes
 - h. ☐ vacation
 - i. ☐ other (specify) _____
12. Check which of these aero® products you currently own:
 - a. ☐ AeroBed™
 - b. ☐ Minute Bed®
 - c. ☐ Deluxe AeroBed™
 - d. ☐ Raised AeroBed™
 - e. ☐ Pillowtop AeroBed™
 - f. ☐ SleepAway Bed™
 - g. ☐ Pools
 - h. ☐ other (specify) _____
 - i. ☐ none